


MINI-GREENHOUSE COMPONENTS

Use two inch by one inch wood for the basic structure. Make proper joints, join the pieces with long nails hammered right through both pieces of wood and clenched. Strengthen the structure with wires. Use nails and wooden battens to fix a large sheet of transparent plastic right over the top and sides. Fit smaller pieces of plastic to the ends. Make pin-holes in the top to let the rain in.

STRAINING THE WIRES

When you have fitted a double length of wire (below right), push a stick between the two wires and twist until the wires are taut. Then tie the stick to the wires.

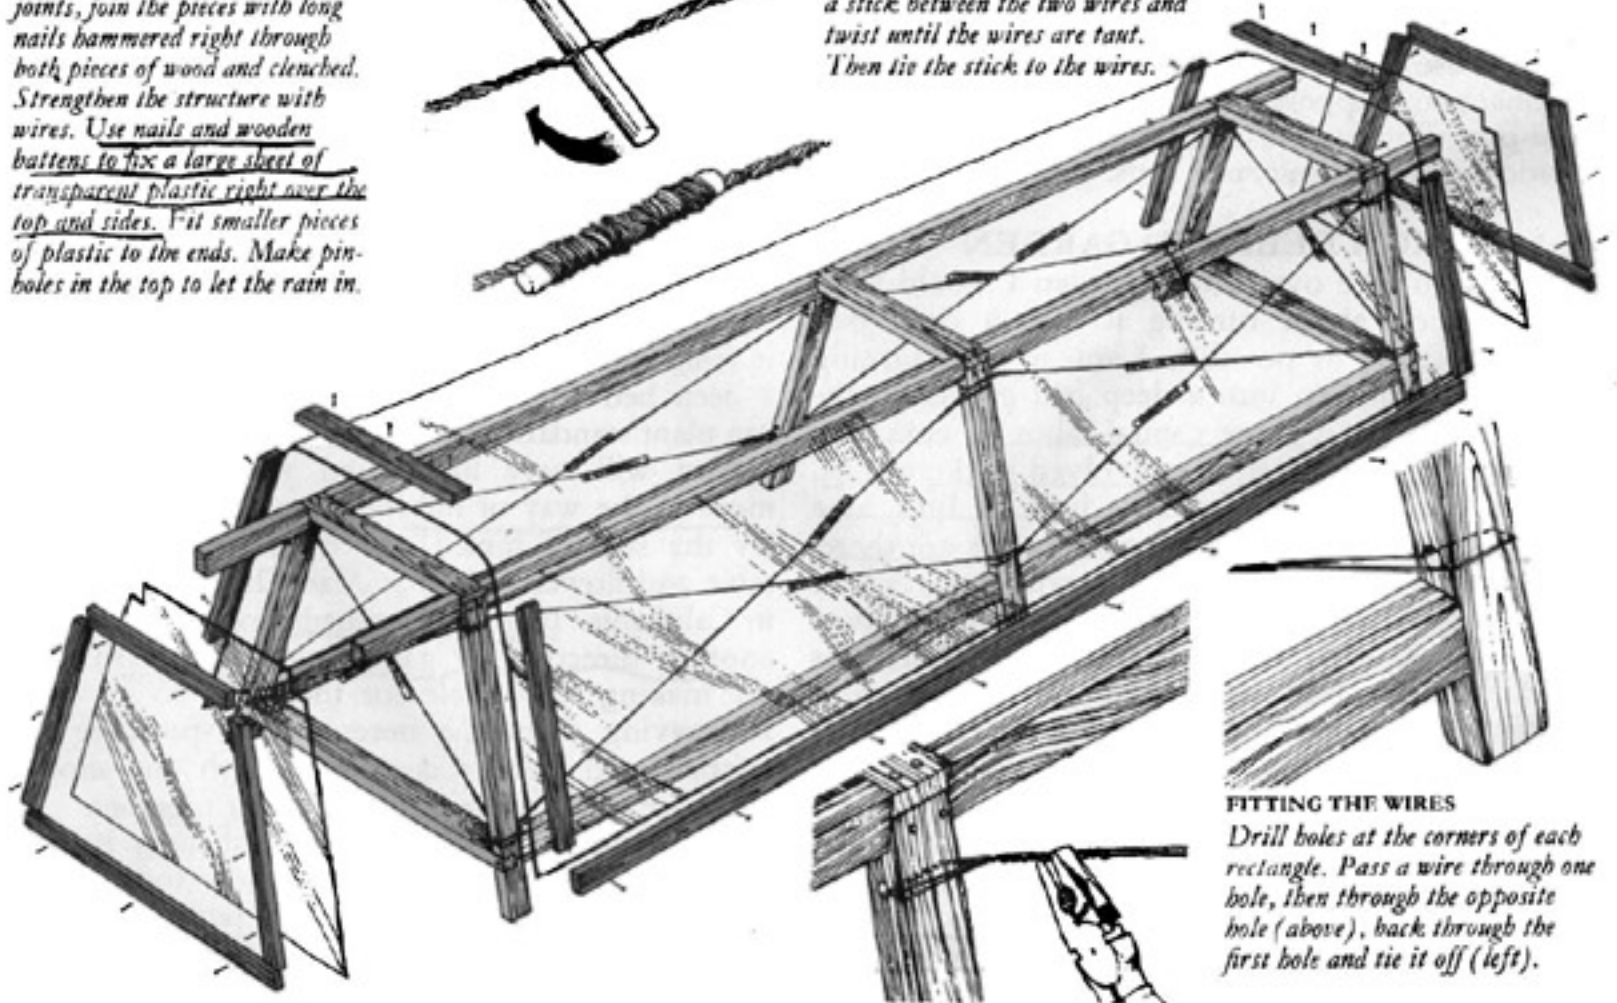

FITTING THE WIRES

Drill holes at the corners of each rectangle. Pass a wire through one hole, then through the opposite hole (above), back through the first hole and tie it off (left).